
Spare parts

ACP 28 Functional block
spare part list.....  F 60

ACP 28 - ACP 40 - ACP 40 G
rotor spare part list  F 61

Motor/variator
spare part list.....  F 62

ACP 40 functional block
spare part list.....  F 65

ACP 28 G specific
spare part list.....  F 70

ACP 40 G specific
spare part list.....  F 75

ACP 28 for leak detection
spare part list.....  F 80


Silencer
spare part list.....  F 90

Cover
spare part list.....  F 100

ACP 28 functional block spare part list

Ref.	Description	Qty*	P/N
1	Exhaust stator	1/1	A110541
2	Centering pin	2/12	060268
3	O-ring C3 Ø101	1/6	■
4	Screw CHc M6-45	4/25	■
5	Transfer stator HP	1/1	A110539
6	Transfer stator BP2	1/1	A110538
7	Transfer stator BP1	1/1	A110537
8	Centering pin Ø8 x 12	2/2	071046
9	O-ring C2 Ø27	2/2	■
10	Temperature sensor (cold)	1/1	A460182
11	Inlet stator	1/1	A110700
12	O-ring DN25 (black) C3,6 D29,3	1/1	■
13	Inlet fitting DN25	1/1	065819
14	Conical inlet filter DN25 - 250 µm	1/1	A461949
14a	O-ring DN25	1/1	■
15	Temperature sensor (hot)	1/1	A462231
17	O-ring C1,78 Ø14	1/3	■
18	Plug	3/3	052181
19	Screw CHc M4-12	9/9	102946
20	Bearing flange	1/1	102945
21	Bearing housing	1/1	102945
22	Oil casing	1/1	A111107
24	Screw FHc M4-12	2/2	■
25	Flange sector	2/2	104024
26	Bearing flange	1/1	A328969
27	O-ring C2 Ø35	1/1	■
28	O-ring C2 Ø47	2/2	■
29	Bearing bloc support	1/1	A1109865
30	Double lip seal 20 x 30 x 8	1/1	■
31	Double lip seal 25 x 35 x 8	1/1	■
33	Hoisting ring	2/2	107220
34	Spacer for hoisting ring	2/2	A459748
37	Spacer for damper	2/2	A459003
38	Damper	2/2	107160
38a	Spacer washer	2/2	A461901
39	Oil level sight glass	1/1	■

(*) Quantity / Total quantity

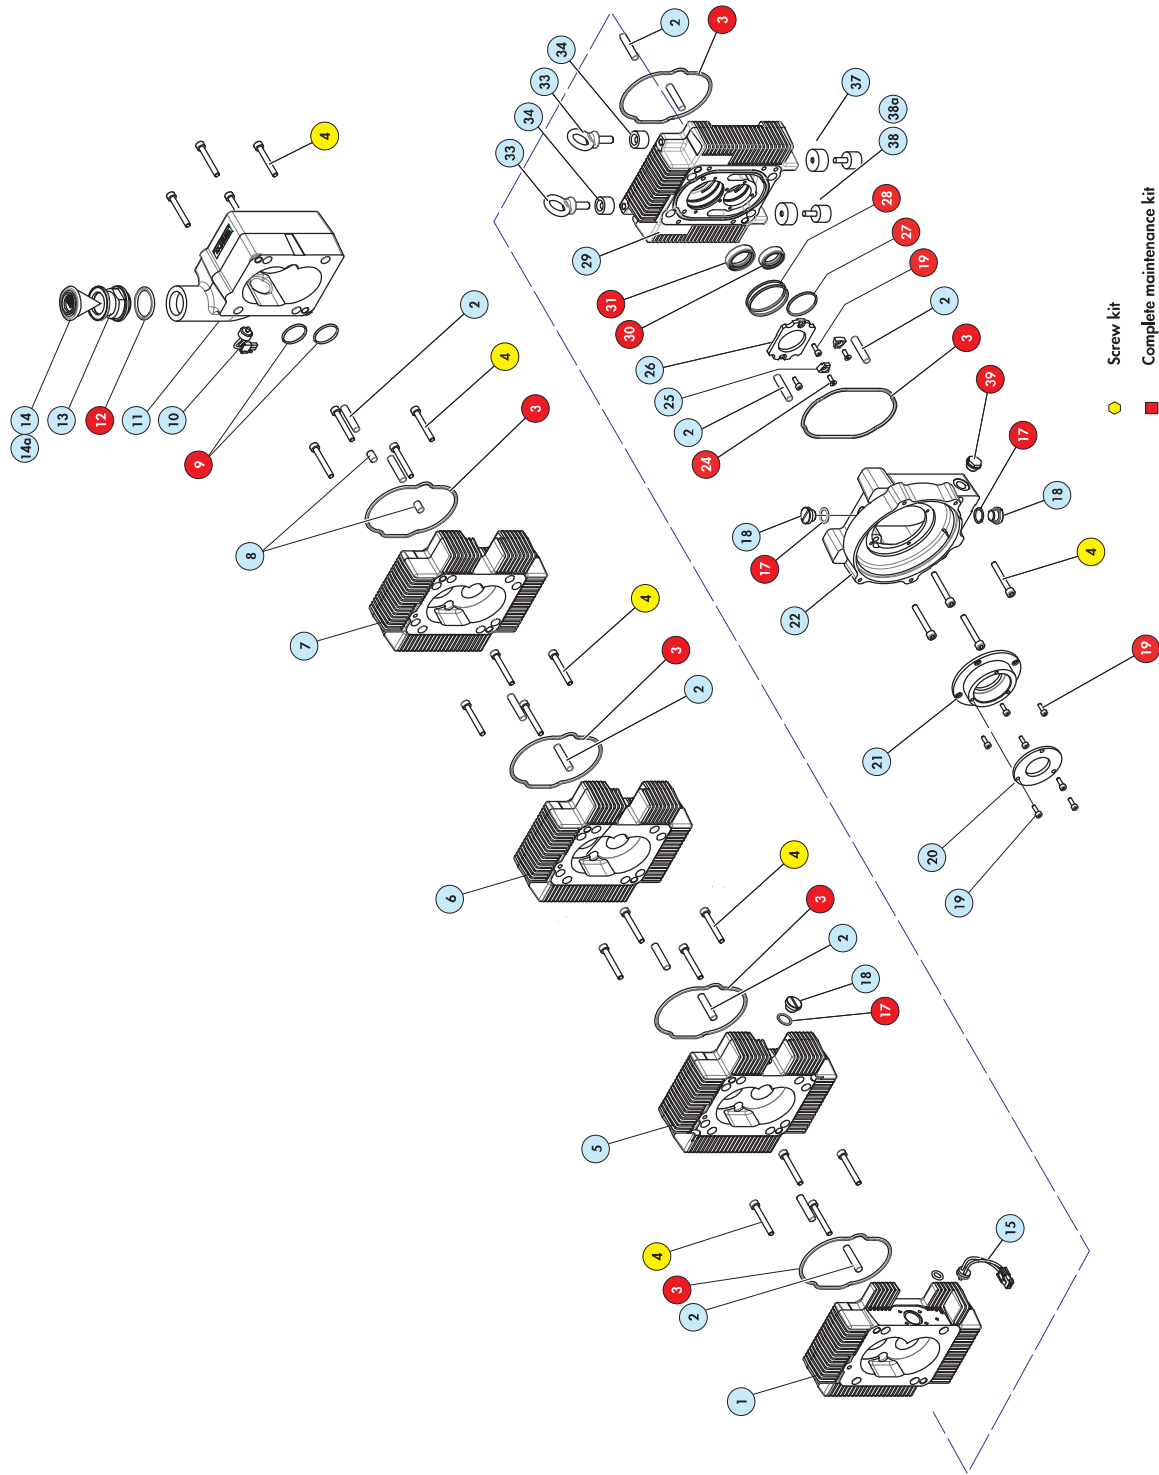

ACP 28 - ACP 40 - ACP 40 G rotor spare part list

Ref.	Description	Qty* ACP 40 / ACP 28	P/N
4	Screw CHc M6-45	1/25	▲
19	Screw CHc M4-12	3/12	■
40	Motor rotor washer	1/1	102966
41	Motor	1/1	108946
42	Motor spacer	1/1	A460287
43	Roller bearing	1/1	■
44	Spacer	1	102948
45	Set of 2 gear	1/1	A329774
46	Driving gear ring	1/1	A329261
47	Bearing 5204	1/1	■
48	Spring washer	2/2	■
49	Deflector Ø29	1/1	102958
49a	Deflector Ø29	2/2	▲
50	Driving shaft ACP 28	—	A214863
50'	Driving shaft ACP 40	1/1	A214756
51	Threaded lobe 10 m3	10/10 8/8	106700
52	Threaded lobe 20 m3	2/2	106701
53	Ball bearing 6001	2/2	■
54	Countersunk washer M6x16	2/2	A458813
55	Screw FHC M6-12	3/3	▲
56	Worked pin	12/12 10/10	■
57	Worked lobe 20 m3	2/2	A458835
58	Screw CHc M4-50	12/12 10/10	■
59	Worked lobe 10 m3	10/10 8/8	A458834
60	Washer Ø19	1/1	102955
61	Driven gear ring	1/1	102950
62	Lubrication plate	1/1	102951
63	Screw FS M3-5	2/2	▲
64	Ball bearing 5202	1/1	■
65	Spring washer	3/3	102959
66	Deflector Ø29	1/1	▲
66a	Deflector Ø23	2/2	■
67	Parallel key 5 x 5 x 11	2/2	▲
68	Driven shaft ACP 28	—	A214877
68'	Driven shaft ACP 40	1/1	A214757

(*) Quantity / Total quantity

— Driving shaft (M)


--- Driven shaft (m)

▲ Screw kit

■ Complete maintenance kit

● Pin kit

▲ Deflector kit

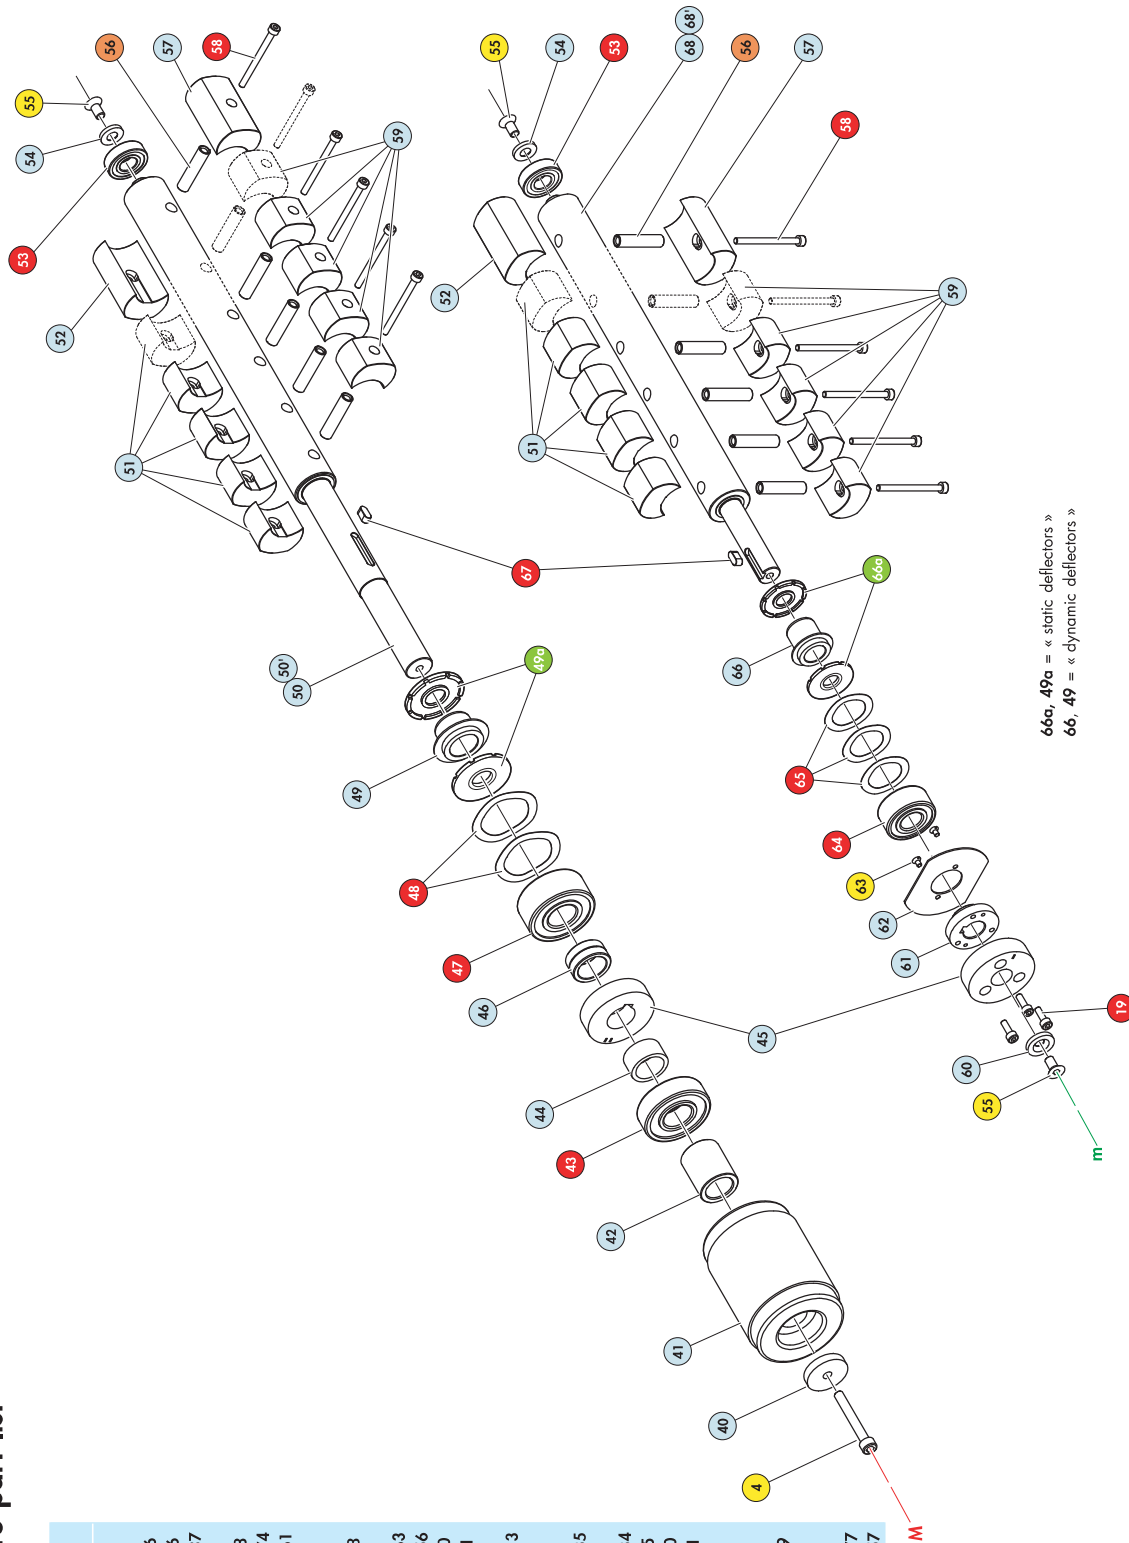


66a, 49a = « static deflectors »
66, 49 = « dynamic deflectors »

Motor / variator spare part list


Ref.	Description	Qty*	P/N
69	Variator cover plug	1/1	A460666
70	Variator gasket OEM	1/1	A329486
71	Variator ACP 28	1/1	P0342E1
72	Variator ACP 40	1/1	P0342E4
73	Screw FHc M5-12	2/2	
74	Screw CHc M5-16	2/2	
75	Washer M5	2/2	
76	Cable clamp	1/1	109247
77	3Ø motor (air cooled) ACP28	1/1	108946
78	Motor support	1/1	A110488
79	Ord. washer Ø6	4/4	
80	Screw Hc M5-12	1/1	
81	Damper	1/1	107160
82	Motor support	1/1	A459728
83	Screw CHc M6-10	4/4	
83a	Screw FHc M4-16	3/3	
84	Screw CHc M4-12	1/1	
84	Equipped 24 V fan	1/1	109022
85	Washer M4	1/1	
-	Ground wire	1/1	A460609
-	Wiring harness	1/1	A329264

● Screw kit

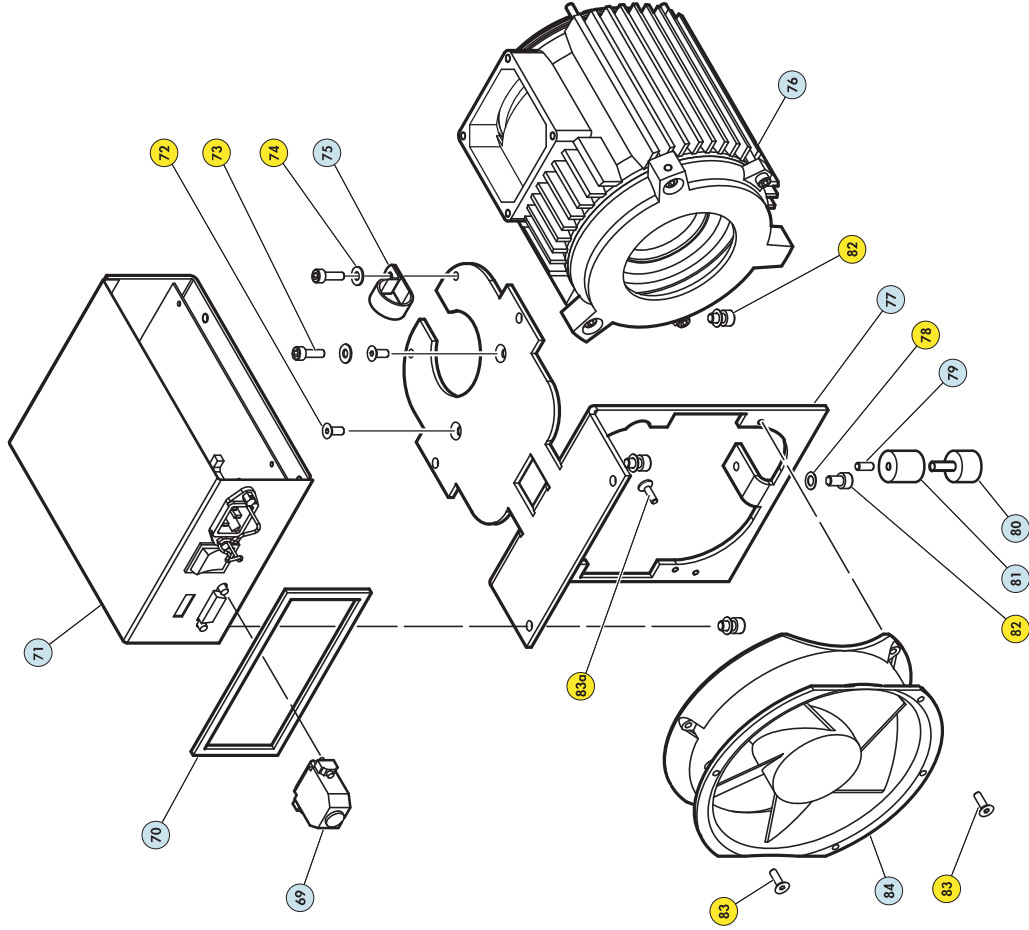

ACP 40 functional block spare part list

Ref.	Description	Qty*	P/N
1	Exhaust stator	1/1	A110541
2	Centering pin Ø8 x 37	2/12	060268
3	Screw C3 Ø101	1/6	■
4	Screw CHc M6-45	4/21	■
4a	Screw CHc M6-80	4/4	■
5	Transfer stator HP	1/1	A110539
6	Transfer stator BP2	1/1	A110538
7	Transfer stator BP1	1/1	A110537
8	Centering pin Ø8 x 12	2/2	071046
9	O-ring C2 Ø27	2/3	■
10	Temperature sensor (cold)	1/1	A460182
11	Inlet stator	1/1	A111183
12	O-ring C2 Ø47	1/1	■
13	Inlet fitting DN 40	1/1	A330027
13a	Screw CHc M4 x 25	4/4	082716
13b	Ord. washer	4/4	073458
14	Conical inlet filter DN 40 - 250 µm	1/1	A462174
14a	O-ring DN40	1/1	■
15	Temperature sensor (hot)	1/1	A462231
16	O-ring C3,6 Ø29,3	1/1	■
16a	Obturator	1/1	065821
17	O-ring C1,78 Ø14	1/3	■
18	Plug	3/3	052181
19	Screw CHc M4-12	9/9	■
20	Bearing flange	1/1	102946
21	Bearing housing	1/1	102945
22	Oil casing	1/1	A111107
24	Screw FHC M4-12	2/2	■
25	Flange sector	2/2	104024
26	Bearing flange	1/1	A328969
27	O-ring C2 Ø35	1/1	■
28	Idem ref 12	2/2	■
29	Bearing block support	1/1	A1109875
30	Double lip seal 20 x 30 x 8	1/1	■
31	Double lip seal 25 x 35 x 8	1/1	■
33	Hoisting ring	2/2	107220
34	Spacer for hoisting ring	2/2	A459748
37	Spacer for damper	2/2	A459003
38	Damper	2/2	107160
38a	Spacer washer	2/2	A461901
39	Oil level sight glass	1/1	■
89	O-ring C1,5 Ø5,9	6/6	-
91a	Equipped plug	2/2	A461350
92	Screw CHc M3 x 8	4/4	■
93	Purge cover	2/2	A459917
94	O-ring C1,5 Ø11	2/2	■

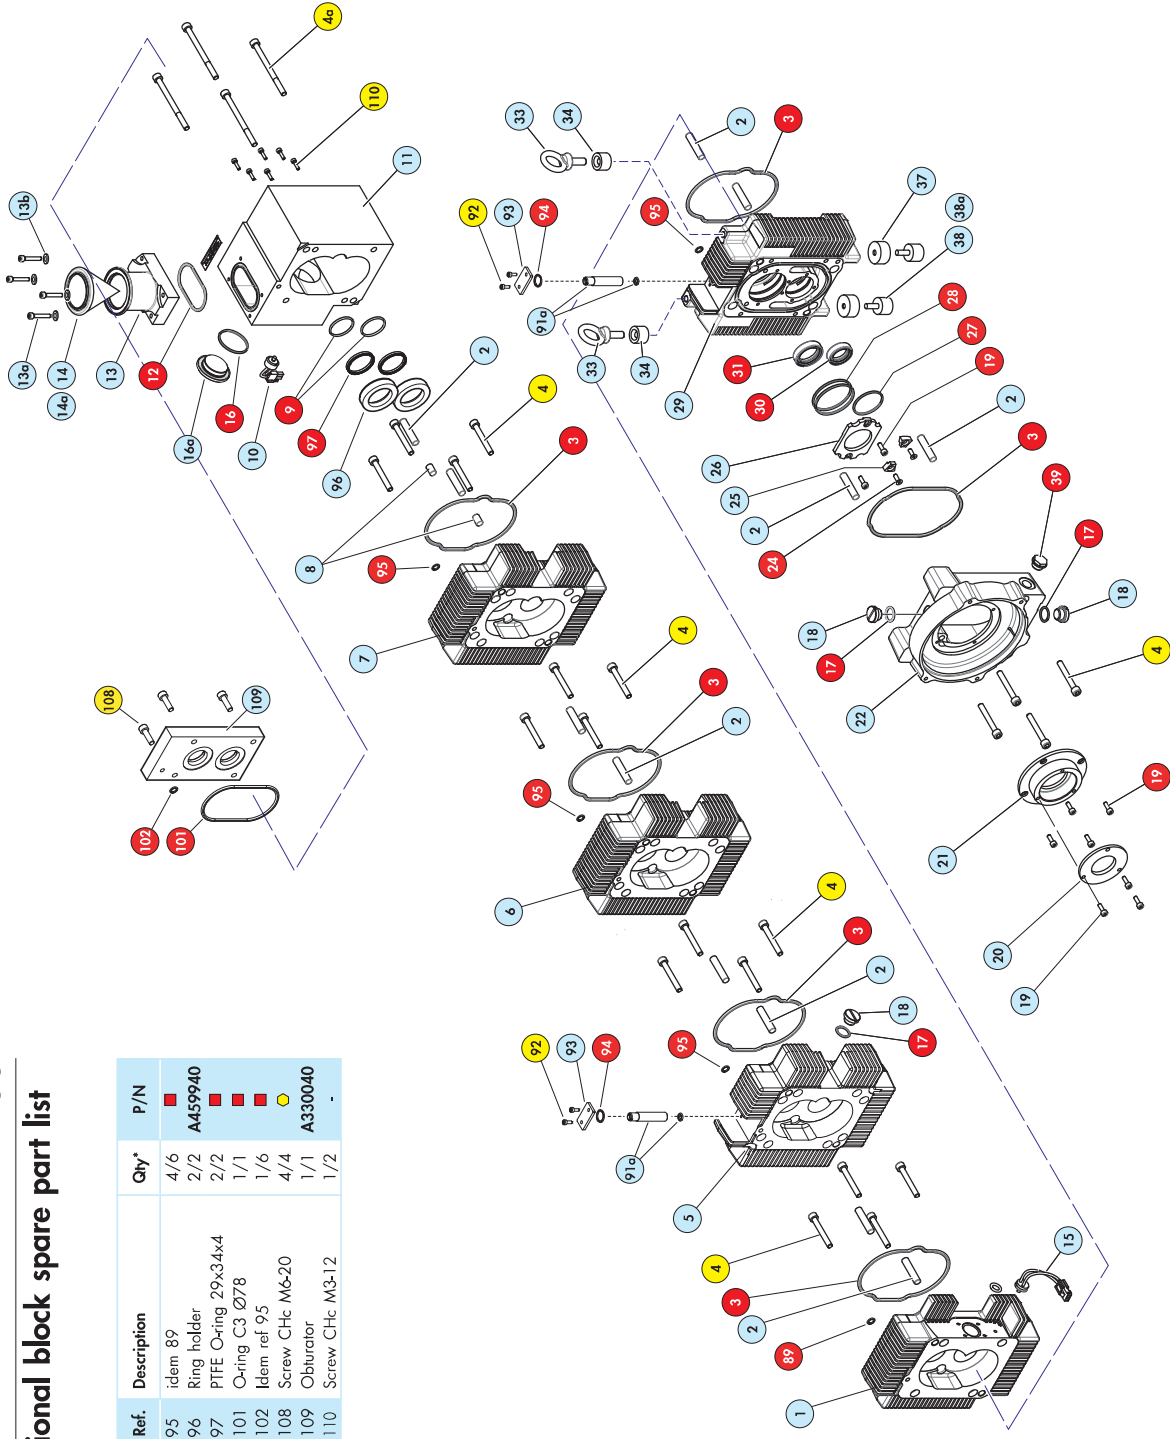


■ Screw kit
■ Complete maintenance kit

(*) Quantity / Total quantity

ACP 28 G specific spare part list

Ref.	Description	Qty*	P/N
50a	Driving shaft ACP 28 G	1/1	A214864
68a	Driven shaft ACP 28 G	1/1	A214878
89	O-ring C1,5 Ø5,9	1/6	■
90	Transfer stator HP	1/1	A110702
91	Equipped anti-suckback valve: O-ring 2 x Ø4,5	1/2	■ 109354
	Spring support	-	-
	Spring	-	-
	Stainless steel ball Ø5,8	-	■
	O-ring C1 Ø4	-	■
	Short anti-suckback	-	-
	Jet Ø0,3	-	-
92	Screw CHc M3-8	2/6	● A459917
93	Purge cover	1/2	■ A459917
94	O-ring C1,5 Ø11	1/3	■
95	idem ref 89	3/6	■
96	Centering ring	2/2	■ A459940
97	PTFE O-ring 29x3,4x4	2/2	■ A459940
98	Inlet stator	1/1	A110701
99	O-ring C3,6 Ø29,3	1/1	■
101	O-ring C3 Ø78	1/1	■
102	idem ref 89	1/6	■
103	Equipped anti-suckback valve: O-ring 2 x Ø4,5	1/1	■ 109473
	Spring support	-	-
	Spring	-	-
	Stainless steel ball Ø5,8	-	-
	O-ring C1 Ø4	-	■
	Long anti-suckback valve	-	-
	Jet Ø0,08	-	-
104	Purge inlet	1/1	A329250
105	Connector	1/1	103211
106	idem ref 92	2/6	-
107	idem ref 94	1/3	-
108	Screw CHc M6-20	4/4	● A329301
109	Injecting plate	1/1	■ A329301
110	Screw CHc M3-12	6/6	● A329301
111	idem ref 91	1/2	-
112	idem ref 92	2/6	-
113	idem ref 93	1/2	-
113a	idem ref 94	1/3	-
114	idem ref 89	1/6	-
115	Bearing block support ACP 28 G	1	A1109875
116	Plug 1/8 NPT	1/1	082926


(*) Quantity / Total quantity

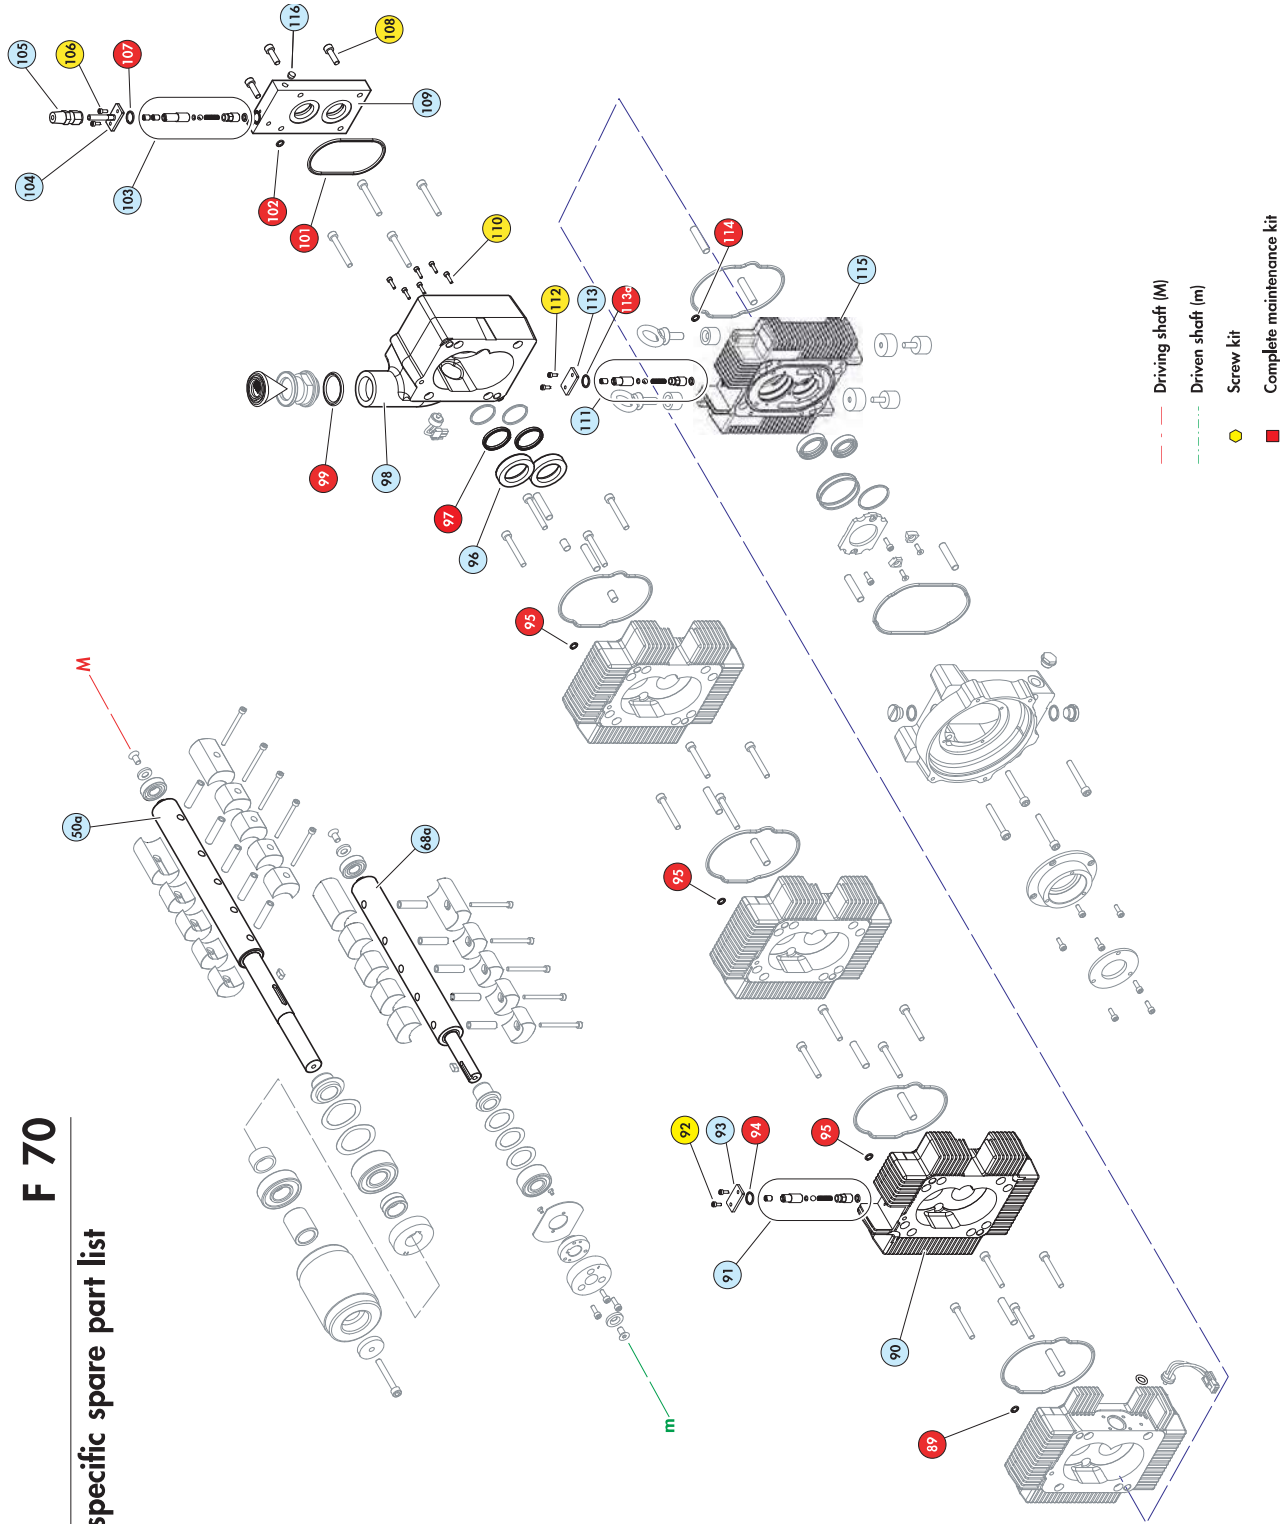

ACP 40 G specific spare part list

Ref.	Description	Qty*	P/N
91	Equipped anti-suckback valve: O-ring 2 x Ø4.5 Spring support Spring Stainless steel ball Ø5.8 O-ring C1 Ø4 Short anti-suckback Jet Ø0.3	1/2	109354
92	Screw CHc M3-8	4/4	A459917
93	Purge cover	2/2	
94	O-ring C1,5 Ø11	2/3	
101	O-ring C3 Ø78	1/1	
102	O-ring C1,5 Ø5.9	1/1	
103	Equipped anti-suckback valve: O-ring 2 x Ø4,5 Spring support Spring Stainless steel ball Ø5.8 O-ring C1 Ø4 Long anti-suckback valve Jet Ø0.08	1/1	109473
104	Purge inlet	1/1	A329250
105	Connector	1/1	103211
106	idem ref 92	2/6	
107	idem ref 94	1/3	
108	Screw CHc M6-20	4/4	
109a	Injecting plate	1/1	A329301
116	Plug 1/8 NPT	1/1	082926


(*) Quantity / Total quantity

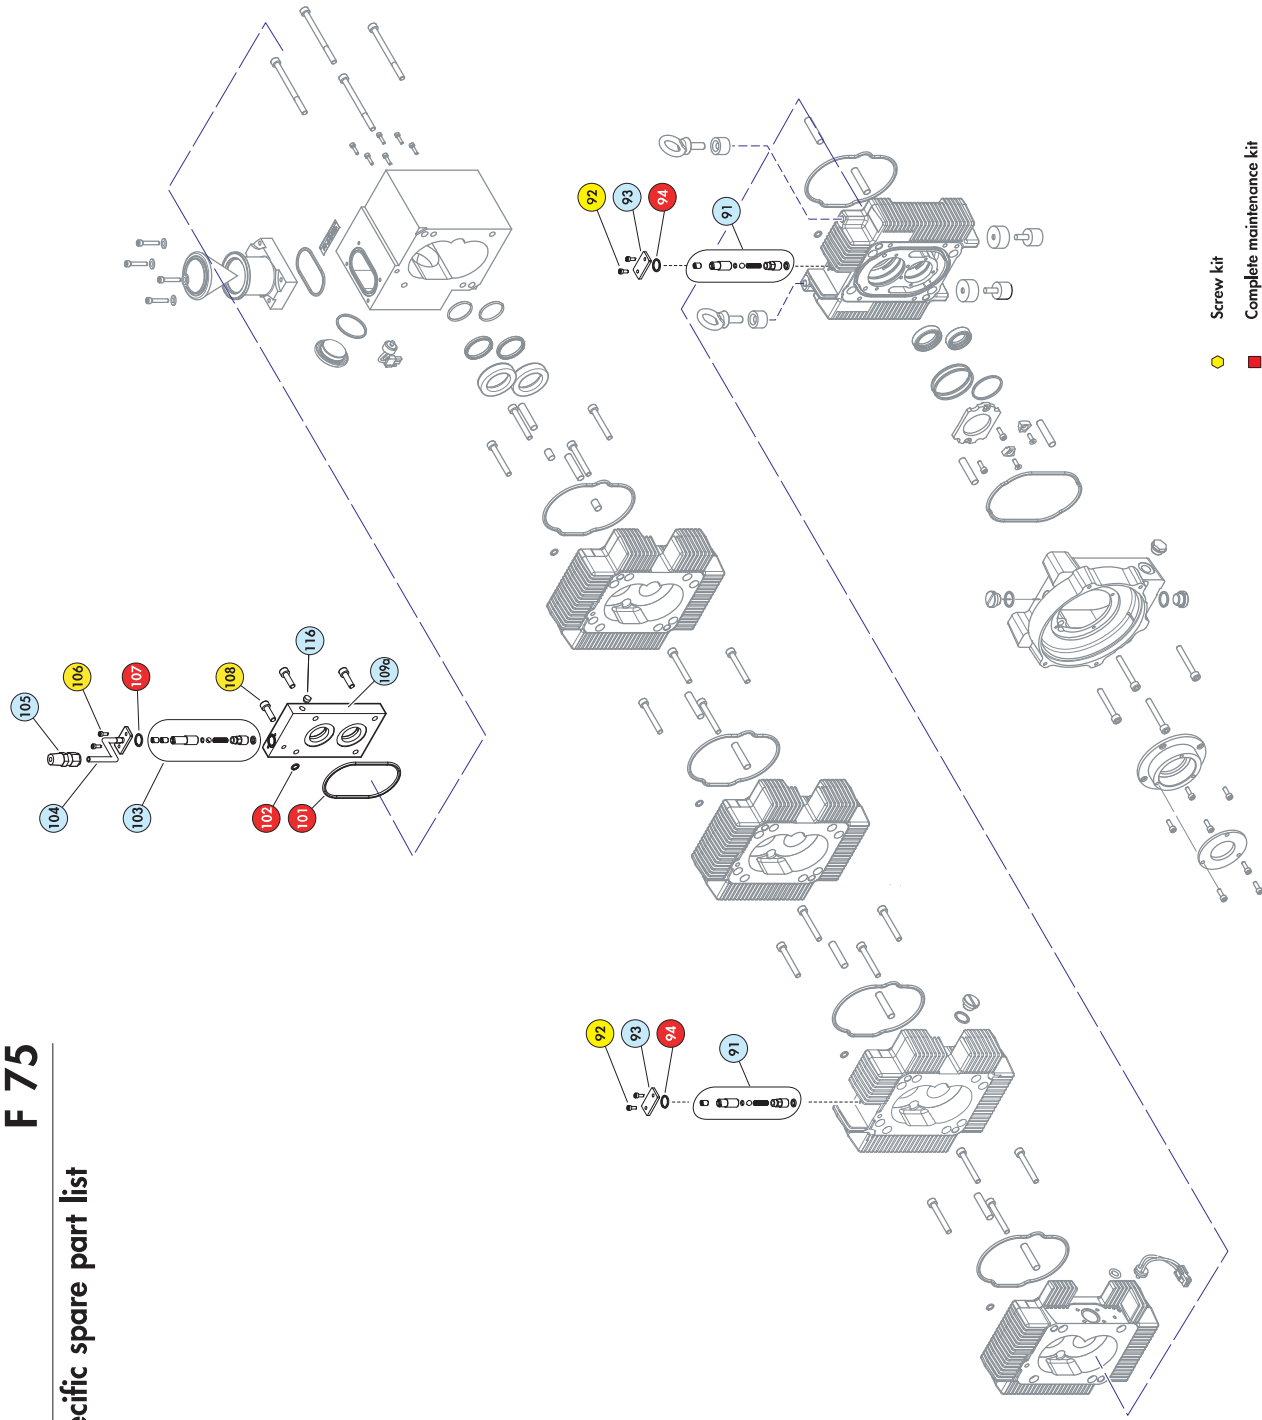

ACP 28 for leak detection spare part list

Ref.	Description	Qty*	P/N
116	Right adaptor connector	1/1	A459352
117	Equipped connector	1/1	107727
118	Rilsan pipe	1/1	103638
119	Connector F/F	1/1	107728
120	Plug connector	1/1	107729
121	Adaptor ACP 28	1/1	A460880
122	Centering ring DN25	1/1	068224
123	Screw H M6-25	4/4	Yellow
124	Washer M6	4/4	Yellow
125	Clamp	4/4	068504
126	Blank-off flange DN25	1/1	068594
127	O-ring DN25	2/2	Red
128	Inlet stator	1/1	A110561

(*) Quantity / Total quantity

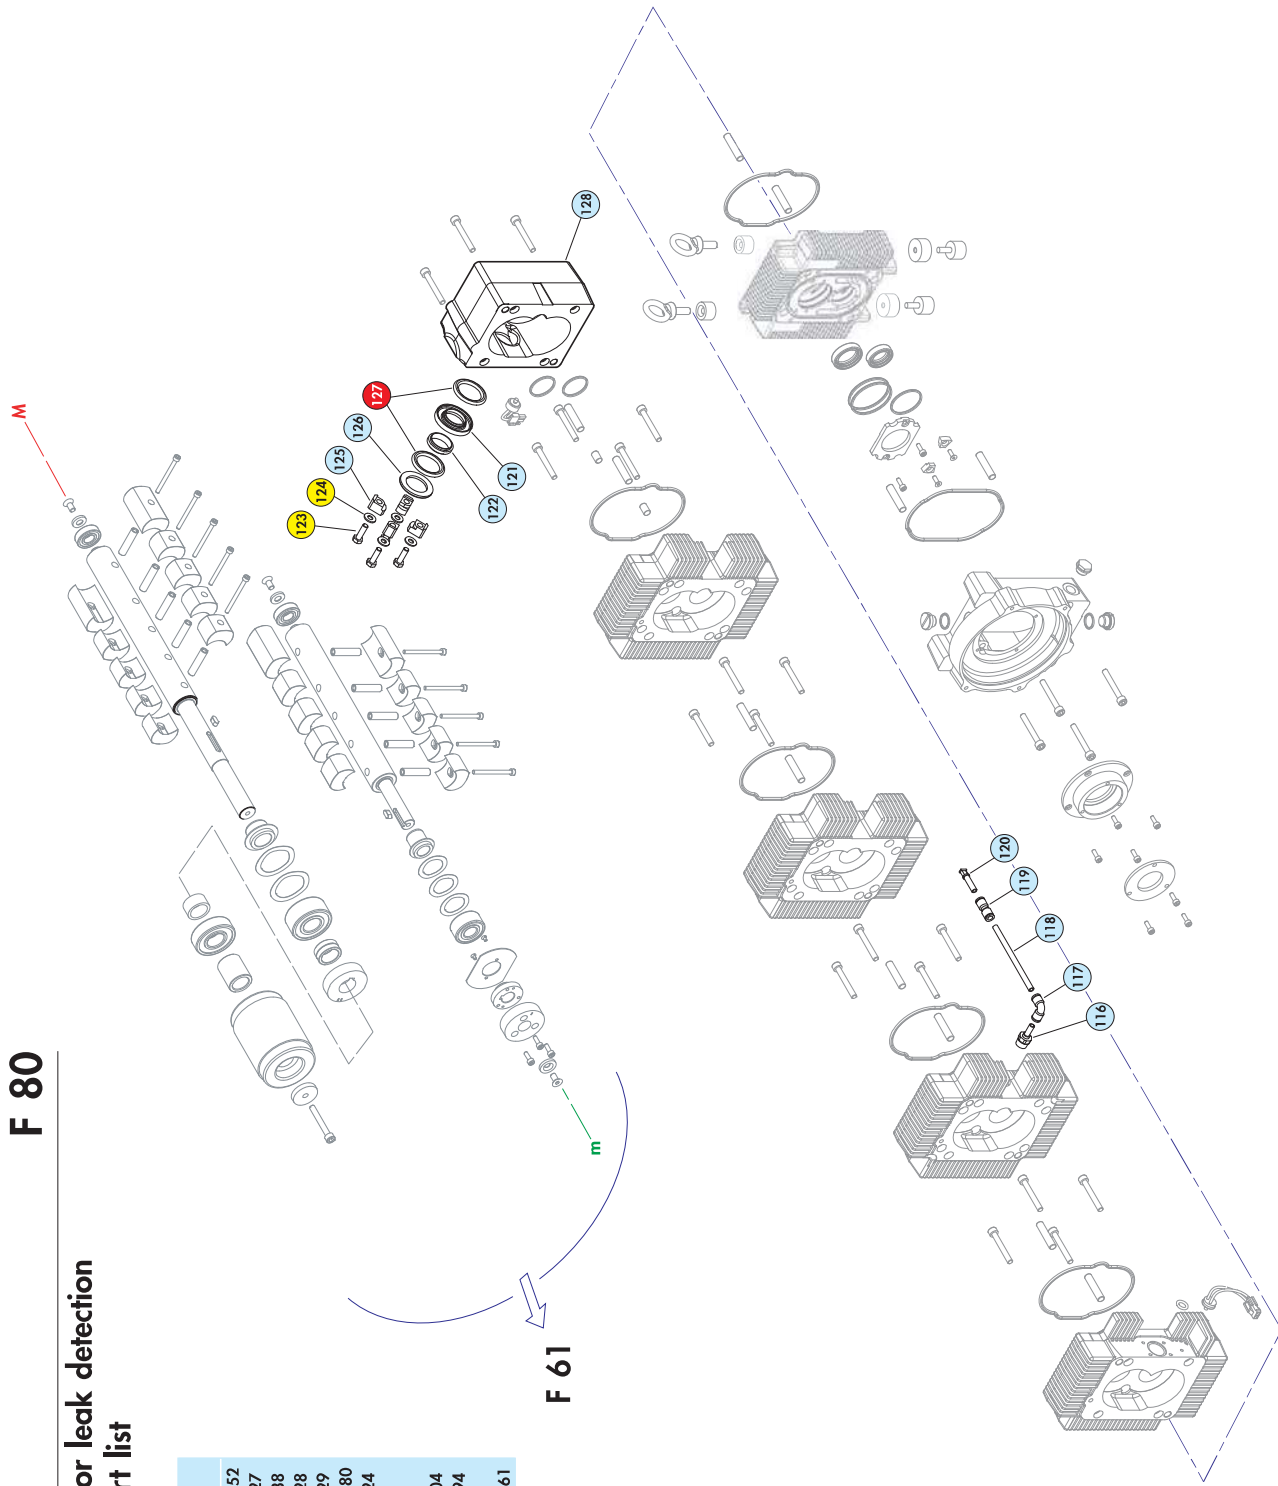


Driving shaft (M)

Driven shaft (m)

Screw kit

Complete maintenance kit

Silencer spare part list

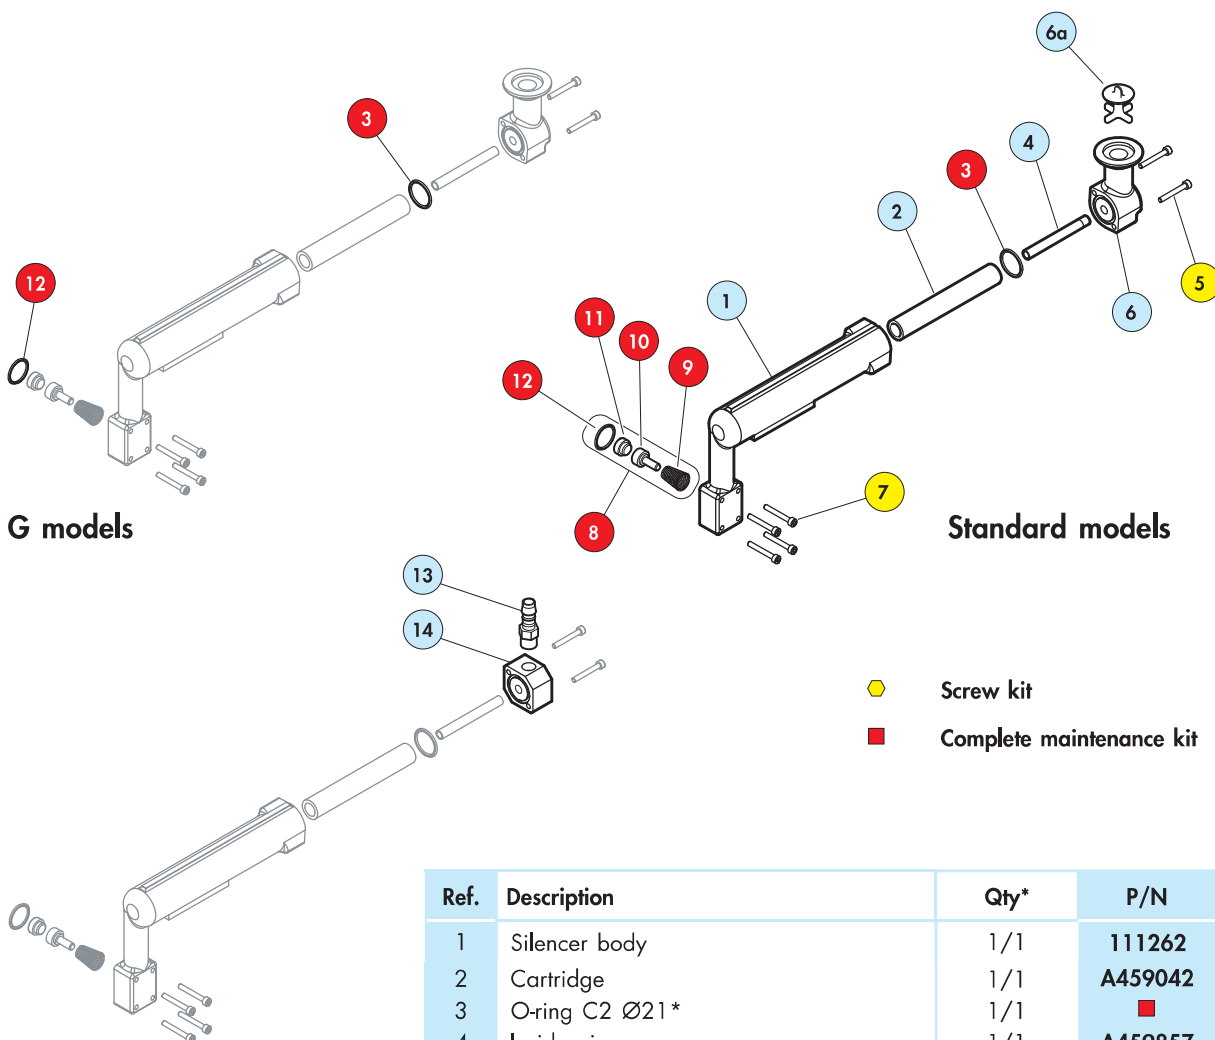

Ref.	Description	Qty*	P/N
1	Silencer body	1/1	111262
2	Cartridge	1/1	A459042
3	O-ring C2 Ø21 *	1/1	■
4	Inside pipe	1/1	A459857
5	Screw CHc M4-30	2/6	●
6	Flange	1/1	A329151
6a	Exhaust valve (ACP 28 /40)	1/1	065791
7	Idem ref. 5	4/6	-
8	Valve	1/1	111261
9	- Conical spring	1/1	■
10	- Valve support	1/1	■
11	- Valve	1/1	■
12	- O-ring C1,78 Ø18,77**	1/1	■
13	Connector	1/1	076790
14	Silencer flange	1/1	A329323

* Quantity / Total quantity

**Black for standard and detection models, green for G models


Cover spare part list

Ref.	Description	Qty*	P/N
ACP 28 for leak detection			
84	Equipped 24 V fan	1/1	109022
130	Fan grid	1/1	105648
131	Screw FHc M4-M16	2/2	109255
132	Protection	1/1	109255
133	Screw CHc M4-12	1/1	109255
134	Washer M4	1/1	109255
135	Screw CHc M5-12	1/1	109255
136	Equipped cover	1/1	A005697
137	Feed through sleeve	3/3	101962
138	Upper foam protection	1/1	A329696
139	Lower foam protection	1/1	103793
140	Equipped base	1/1	A005698
141	Screw FHc M4-16	6/6	109255
142	Screw FHc M6-12	2/2	109255
143	Nut H M4	1/1	109255
Other models			
144	Equipped upper cover ACP 28 / ACP 28 G	1/1	109302
145	Equipped upper cover ACP 40 / ACP 40 G	1/1	110647
146	Plug washer	2/2	A460258
147	Inlet washer ACP 28	1/1	A459745
148	Inlet washer ACP 40	1/1	A459747
149	Spray washer (G models)	1/1	A460258
150	Equipped low washer	1/1	A461085
151	Screw CBIZ M5-10	4/4	109301
152	Equipped low cover	1/1	108469
153	Damper	4/4	108469
154	Washer M6	3/3	109021
155	Screw CHc M6-8	3/3	109021
156	Clip connector 6,35	1/1	109021
157	idem 134	1/1	-
158	idem 143	1/1	-

(*) Quantity / Total quantity



Screw kit

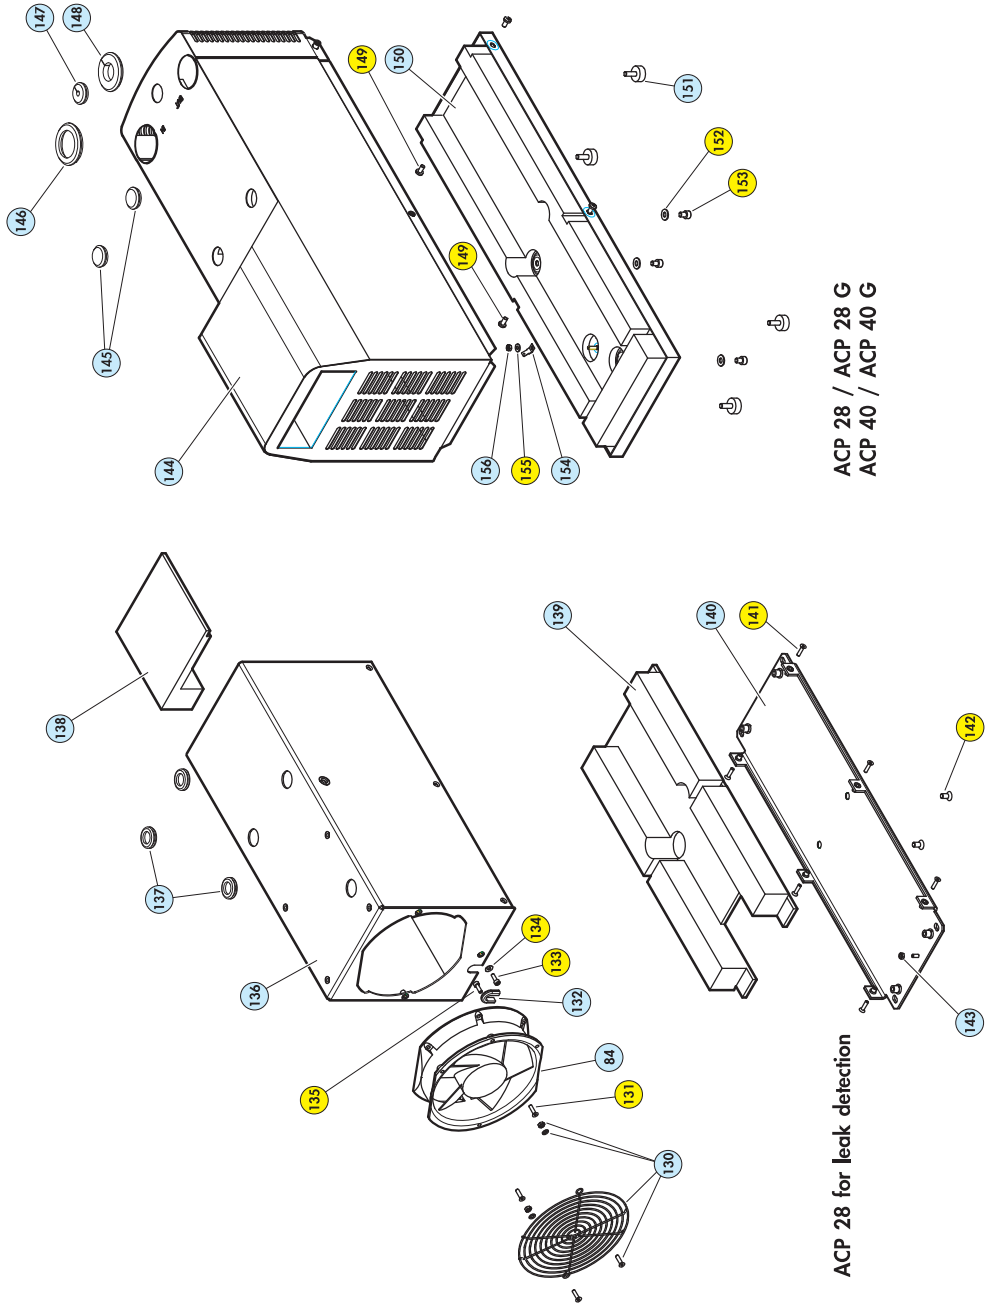

ACP 28 / ACP 28 G
ACP 40 / ACP 40 G

ACP 28 for leak detection